





MANUAL DE INSTRUCCIONES
CUCHILLO ELECTRICO
ED-110

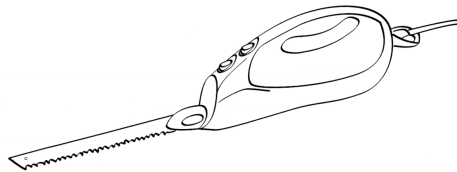

ESTIMADO CLIENTE

Felicitaciones por su compra!
Por favor lea cuidadosamente este manual, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: info@premiermundo.com

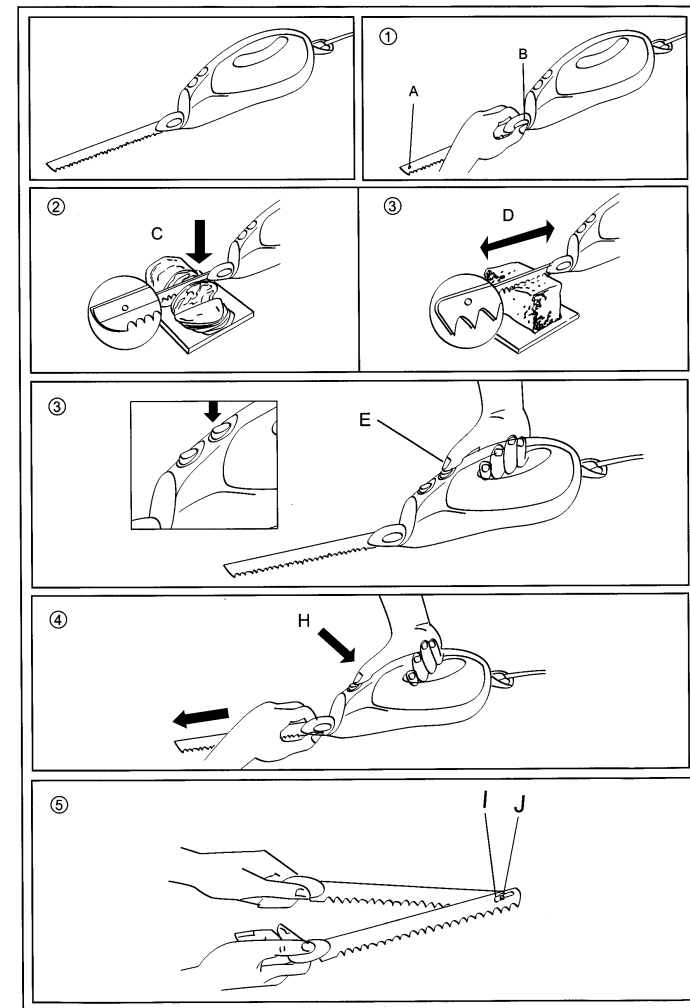

INSTRUCCIONES DE SEGURIDAD

- Mantenga alejando de los niños
- Verifique y asegure que el voltaje local corresponde con el requerido por la unidad.
- Si el cable o el enchufe se dañan, estos deben ser exclusivamente reparados por personal calificado
- Mantenga los cables alejandos de las cuchillas cuando esté en uso
- Mantenga el cable alejado de fuentes de calor como estufas.
- La unidad es solo para uso domestico
- Desconecte luego de usar y antes de limpiar.

ENSAMBLE DE LAS CUCHILLAS

- Desconecte la unidad antes de realizar el ensamble
- Las cuchillas están en sus cubiertas protectoras. (A), los bordes cortantes deben apuntar hacia abajo
- Con cuidado, deslícelos dentro del cuchillo y presione contra las guardas (B) hasta escuchar un clic.
- Al terminar de ajustar, retire las cubiertas protectoras (A).

Atención: las cuchillas son muy filudas, tenga cuidado al manipularlas

USO DE LAS CUCHILLAS

- Las cuchillas universales (C) han sido diseñadas para mejorar el proceso de cortado especialmente en comidas crujientes (como pan y carne)
- Las cuchillas de congelados (D) (dependiendo del modelo) estan diseñadas para cortar alimentos congelados
- Nunca intente cortar huesos

USO DEL CUCHILLO ELECTRICO

Conecte la unidad, presione el botón (E) con su pulgar y luego deslice hacia adelante sobre el alimento a cortar.

PARA RETIRAR LAS CUCHILLAS

Desconecte la unidad, presione y sostenga el botón (H) luego retire las cuchillas tirando de las guardas.

Atención: las cuchillas son muy filudas, tenga cuidado al manipularlas


LIMPIEZA

- Desmonte las láminas resbalando el remache (j) de la ranura del ojo de la cerradura (i). Lávelas con agua jabonosa caliente o colóquelas en el lavaplatos. Limpie la unidad, usando un paño levemente humedecido, y seque cuidadosamente
- No sumerja la unidad en agua, ni la coloque bajo el chorro.

ALMACENAMIENTO

Enrolle el cable alrededor de la unidad y sujetelo con la superficie de succión. El anillo en el cable, le permite colgar la unidad para tenerla siempre a mano.

DIAGRAMA DEL CIRCUITO

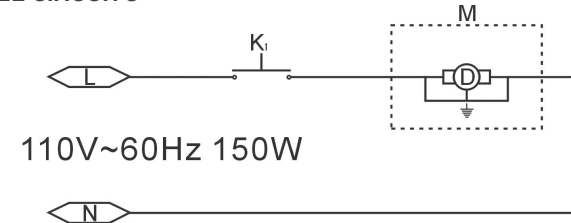

INSTRUCTION MANUAL ELECTRIC KNIFE ED-110

(FOR ILLUSTRATION REFERENCES PLEASE REFER TO THE DIAGRAM ON PAGE 2)

SAFETY DEVICE

- Keep the knife out of the reach of children
- Make sure that the wattage of your fuse box corresponds to the one of your main supply. Any error in connecting your appliance invalidates the guarantee.
- If the mains lead is damaged, it must be replaced by the manufacturer, its customer service or an similarly qualified person to prevent any danger.
- Keep the mains lead away from the blades whilst in use.
- Keep the mains lead away from any heating sources.
- This appliance is for domestic purposes only.
- Unplug the appliance after use and before cleaning.

ASSEMBLING THE BLADES.

- The knife should be unplugged when fitting the blades
- The blades are in their protecting covers(A), the cutting edges downwards.
- Gently slide them into the knife and push against the blades guards(B) until they click.
- When fitted, remove the protective covers(A) from the blades.

Caution: the blades are very sharp, be very careful when handling them.

USING YOUR BLADES

- The universal blades(C) have been developed to improve cutting especially crusty foods (bread, meat...)
- The frozen food blades(D) (depending on model) cut through all frozen foods.
- Never try to cut bones.

USING YOUR ELECTRIC KNIFE

Plug in your appliance, push down button (E) with your thumb then slide it forwards.

TO REMOVE THE BLADES

Unplug the knife, press the button(H), maintain pressure and remove the blades by pulling the guards.

Caution: blades are extremely sharp

CLEANING

- Dismantle the blades by sliding the rivet (J) out of the keyhole slot(I). Wash them with hot soapy water or place them in the dishwasher.
- Clean the appliance with a slightly damp cloth and dry carefully.
- Do not immerse the appliance in water or place it under running water.

STORAGE

You can wrap the flex around the knife and keep it in place with the suction pad.

A ring on the flex allows you to hang up your appliance on the wall so that it is always to hand.

CIRCUIT DIAGRAM

